



RALTRON

Monolithic Crystal Filters — Product Overview & Applications



RALTRON

Introduction: What is a Crystal Filter?

- **Definition:** A **crystal filter** is a **high-selectivity frequency filter** built using **quartz resonators** to pass a narrow band of signals and reject unwanted signals nearby
- **What it does :**
 - **Passes the desired channel** (the wanted signal band)
 - **Rejects adjacent interference** and noise near the channel
 - Improves **receiver selectivity** and overall signal quality
- **When to choose a crystal filter (often vs. SAW):**
 - **Very narrow bandwidth and sharp selectivity** close to the channel are needed
 - **Frequency stability** over temperature and aging is needed
 - **Strong adjacent-signal rejection** is needed in a channel/IF filtering stage

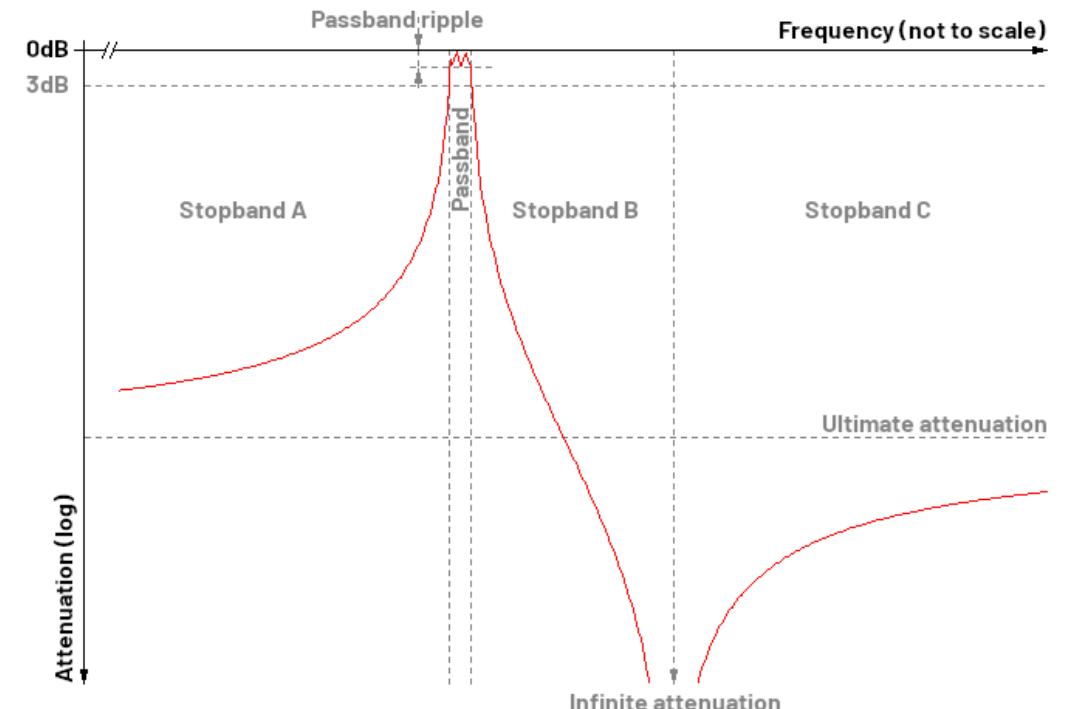



Figure 1: Typical crystal filter band-pass response — relative amplitude (or insertion loss) vs. frequency, showing a **narrow passband** at the center frequency with **steep skirts** that reject adjacent-channel interference.

Source: [Narrow band-pass crystal ladder filters](#)

This document contains confidential and proprietary information of Raltron.
Do not copy or distribute without written permission.


Where Crystal Filters Fit in RF Systems

Crystal filters are typically used in the **receiver signal chain** to provide **channel selectivity**:

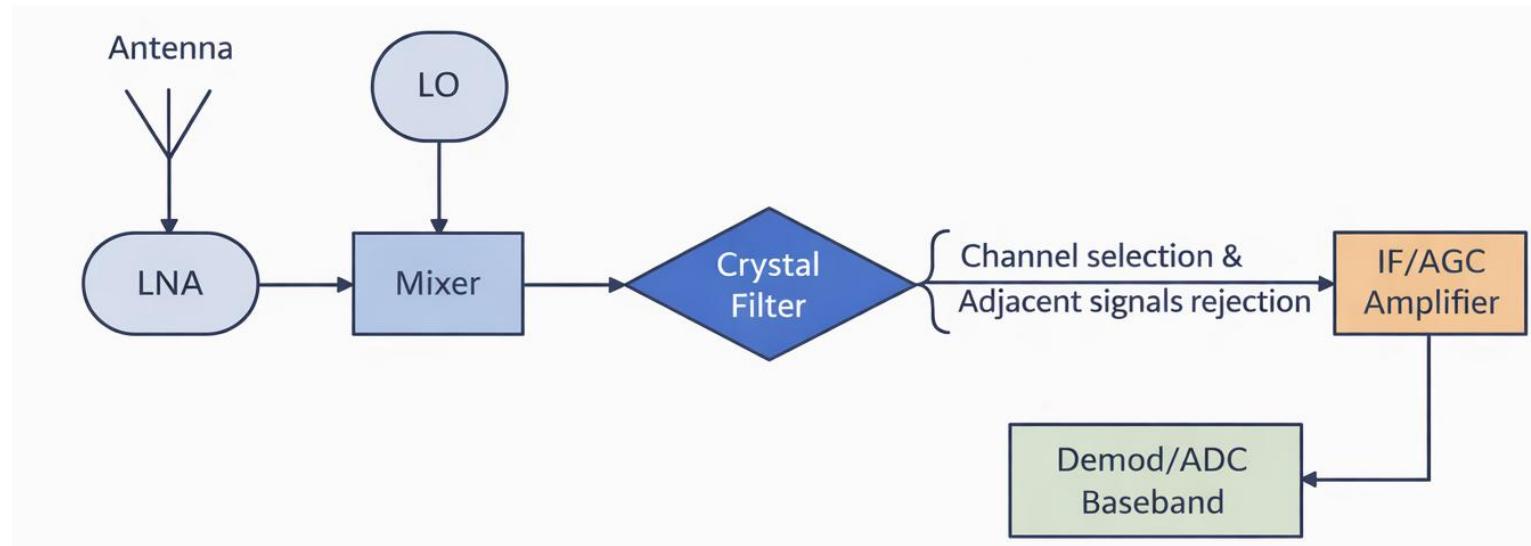


- After frequency conversion, the filter defines the wanted channel bandwidth
- Improves adjacent-channel rejection and reduces interference entering later stages
- Helps protect IF/ADC/baseband stages from strong nearby signals

Monolithic Crystal Filters Portfolio Overview

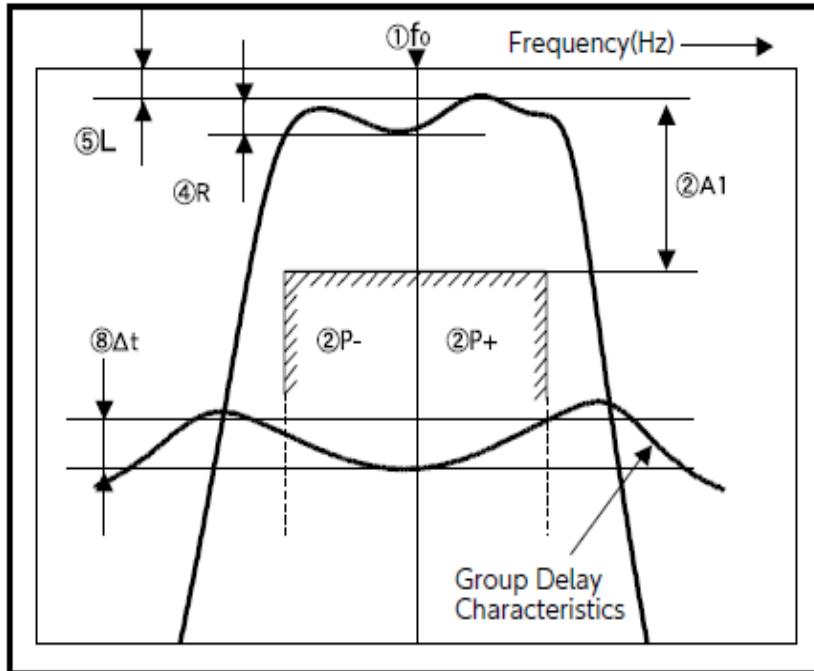

- **Frequency range :** 16.000 to 162.025 MHz
- **Package sizes:**
 - 3.0×3.0 mm
 - 3.8×3.8 mm
 - 6.0×3.5 mm
 - 7.0×5.0 mm
- **Poles:** 2 - 4 poles
- **Guaranteed attenuation:** ≥ 45 dB to ≥ 85 dB
- **3 dB BW options:** 3.5–30 kHz (common: 7.5/10/12/15/20 kHz)
- **Insertion Loss (max):** 2.0–8.5 dB depending on frequency

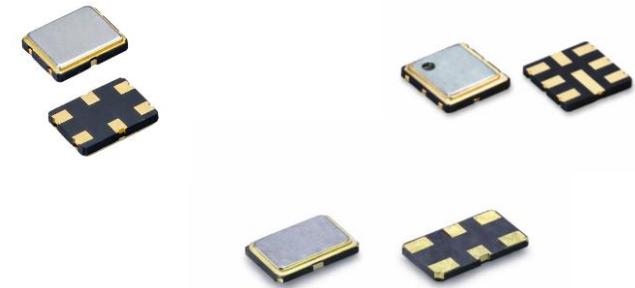


Applications

Satellite Communications (VSAT, LEO), Maritime AIS, Public Safety / Professional Radio (P25, DMR), Patient Monitoring

Satellite Communications (VSAT & LEO)

VSAT:


Fixed satellite terminals for broadband connectivity (ground dish terminals)

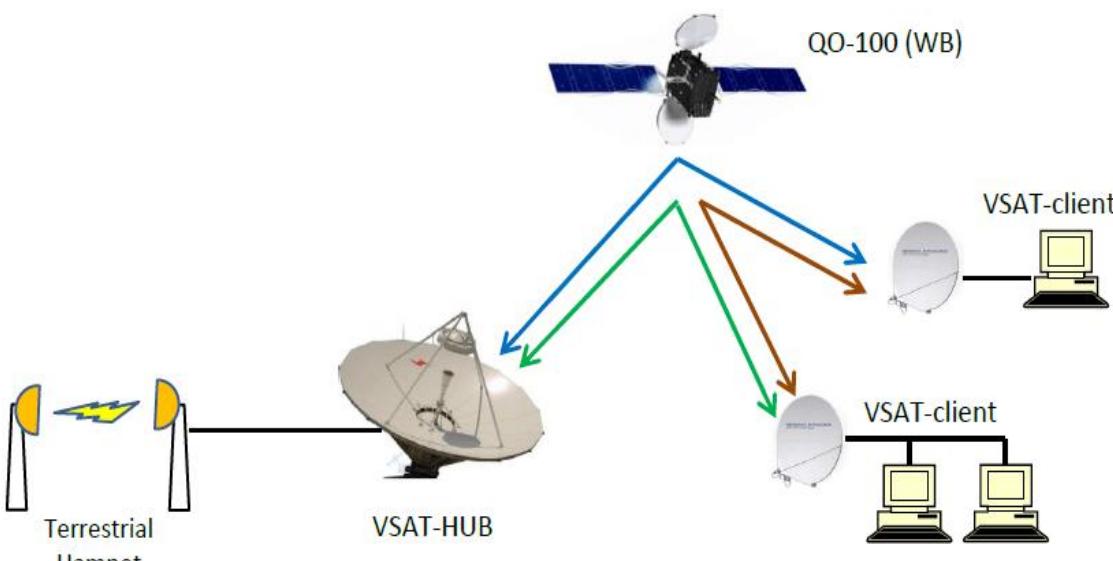

Source: [NPR-VSAT](#)

LEO:

Low-Earth orbit satellite terminals for global coverage and low latency services

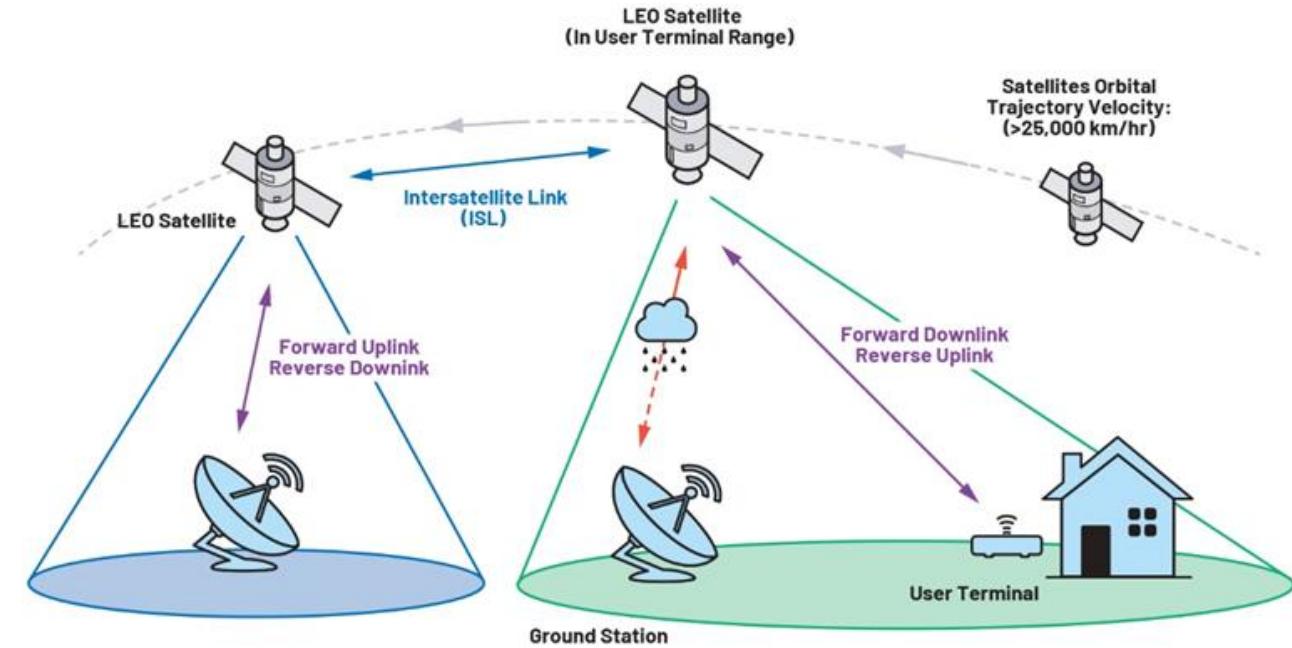

Source: [Low Latency LEO Satellite deployments](#)

Raltron

Monolithic Crystal Filters Solutions for Satellite Communications

Part #	Size(mm)	Frequency (MHz)	Pass Band (kHz)	Insertion Loss (dB)	Guaranteed Attenuation (dB)	Application	Datasheet
RXF-50.000-3.5-3838-8-2	3.8 x 3.8	50.000	± 1.8	4.0	50	VSAT	 PDF
RXF-100.000-20-6035-6-4	6.0 x 3.5	100.000	± 10	4.0	65	LEO	 PDF
RXF-150.000-15-7050-6-2	7.0 x 5.0	150.000	± 7.5	4.0	45	LEO	 PDF



RoHS



REACH
COMPLIANT



Digital Mobile Radio (DMR)

Where Crystal Filters fit:


- Inside DMR receivers
- Provide narrow channel / IF select filtering

Common locations:

- Radio terminals (handheld/mobile)
- Repeater/base-station receivers

Selection based on:

- Customer's receiver frequency plan (IF)
- Required bandwidth / rejection

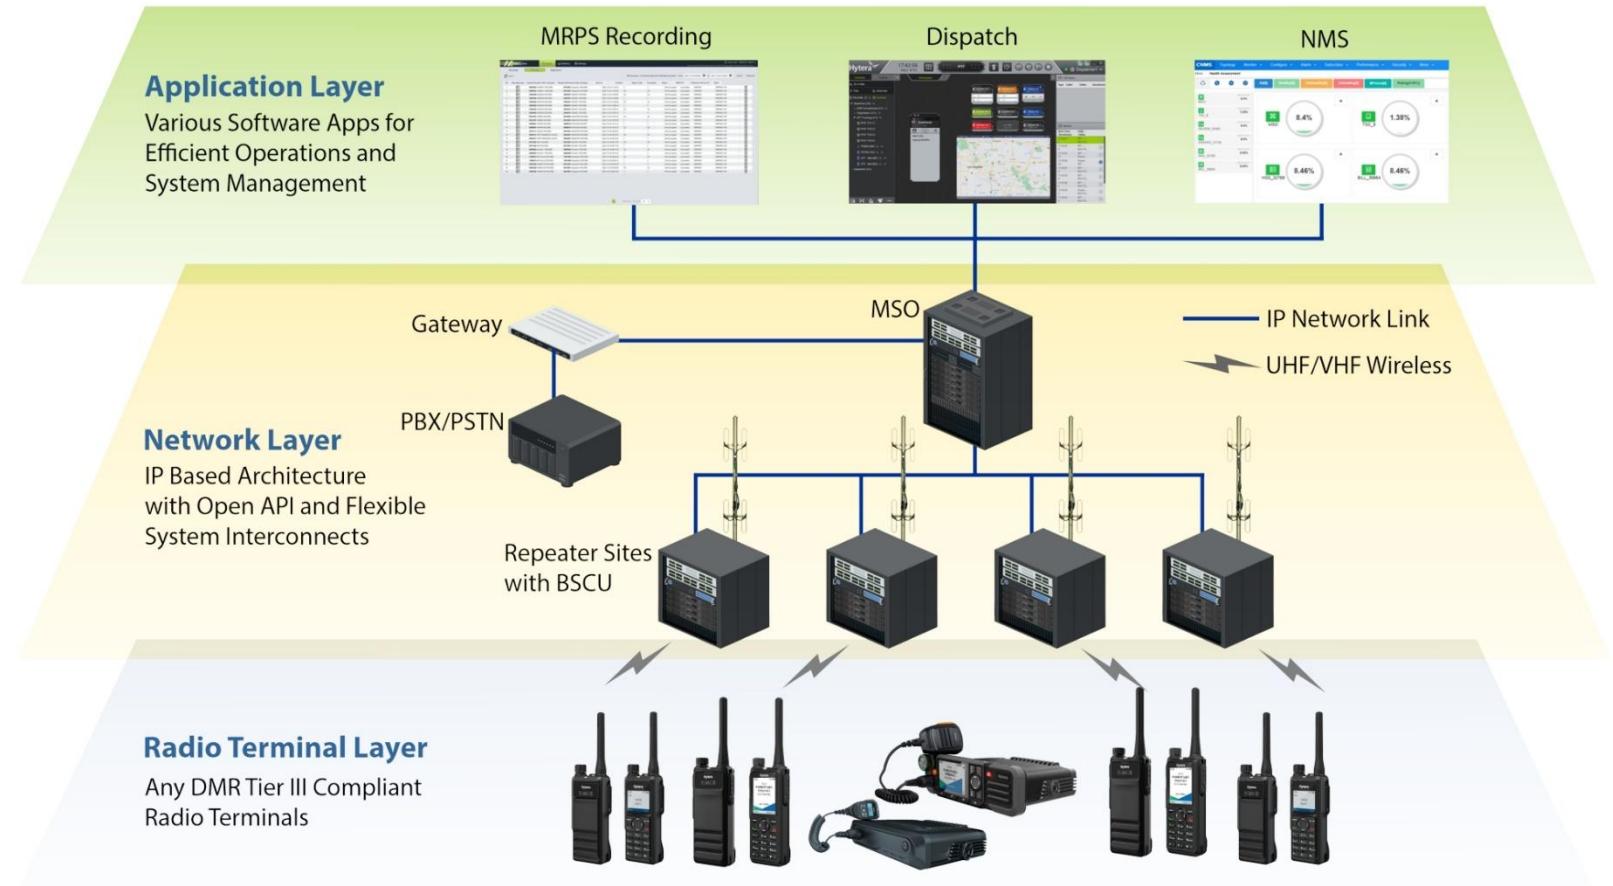


Source: [DMR Tier III Trunking Systems | Hytera US](#)


Raltron

Monolithic Crystal Filters Solutions for Digital Mobile Radio (DMR)

Part #	Size(mm)	Frequency (MHz)	Pass Band (kHz)	Insertion Loss (dB)	Guaranteed Attenuation (dB)	Application	Datasheet
RXF-58.050-10-7050-6-4	7.0 x 5.0	58.050	± 5.0	5.0	85	DMR	 PDF
RXF-73.350-12-7050-6-4	7.0 x 5.0	73.350	± 6.0	5.0	65	DMR	 PDF

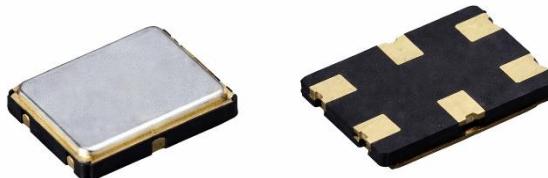

P25 Land Mobile Radio

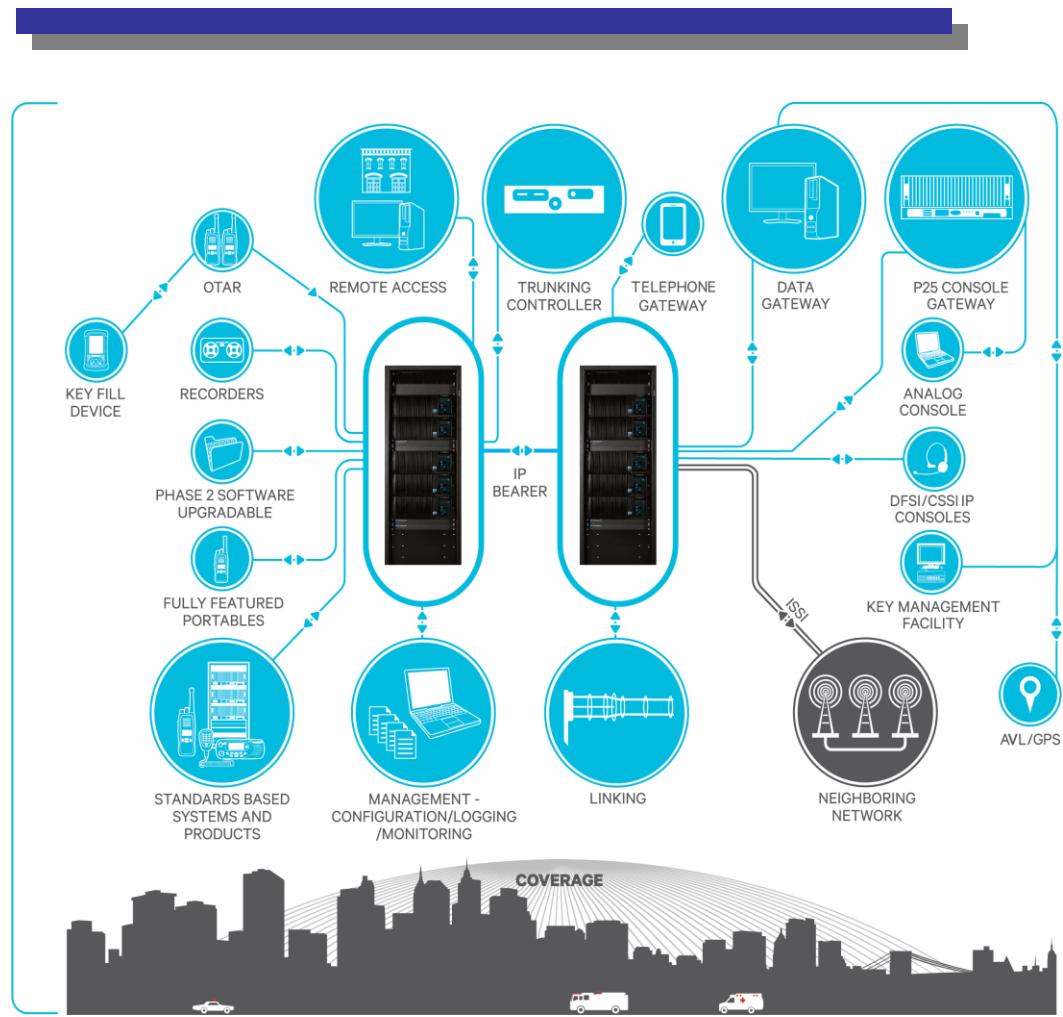

Source: taitradioacademy.com/topic/p25-gateways-1/

Where Crystal Filters fit:

- Inside P25 receiver signal chains
- Provide narrow channel / IF select filtering for high selectivity

Common locations:

- Subscriber radios (portable / mobile)
- Base station / repeater receivers (conventional & trunked sites)


Selection based on:

- Customer's receiver frequency plan (IF)
- Required bandwidth / rejection
- Acceptable insertion loss and package/size constraints

Raltron

Monolithic Crystal Filter Solutions for P25 Land Mobile

Part #	Size(mm)	Frequency (MHz)	Pass Band (kHz)	Insertion Loss (dB)	Guaranteed Attenuation (dB)	Application	Datasheet
RXF-130.000-30-7050-6-4	7.0 x 5.0	130.000	± 15.0	6.0	70	P25 Land Mobile	
RXF-130.050-15-7050-6-4	7.0 x 5.0	130.050	± 7.5	7.0	80	P25 Land Mobile	

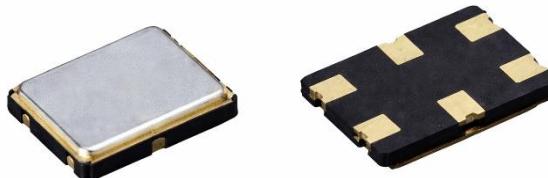

RoHS



REACH
COMPLIANT



Maritime Automatic Identification System (AIS)

Where Crystal Filters fit:


- Inside AIS receiver signal chains
- Provide narrow channel / IF select filtering for high selectivity

Common locations:

- AIS transceivers on vessels
- AIS base stations / shore stations and coastal monitoring equipment
- AIS receivers integrated into marine navigation / tracking systems

Selection based on:

- Customer's receiver frequency plan (IF)
- Required bandwidth / rejection

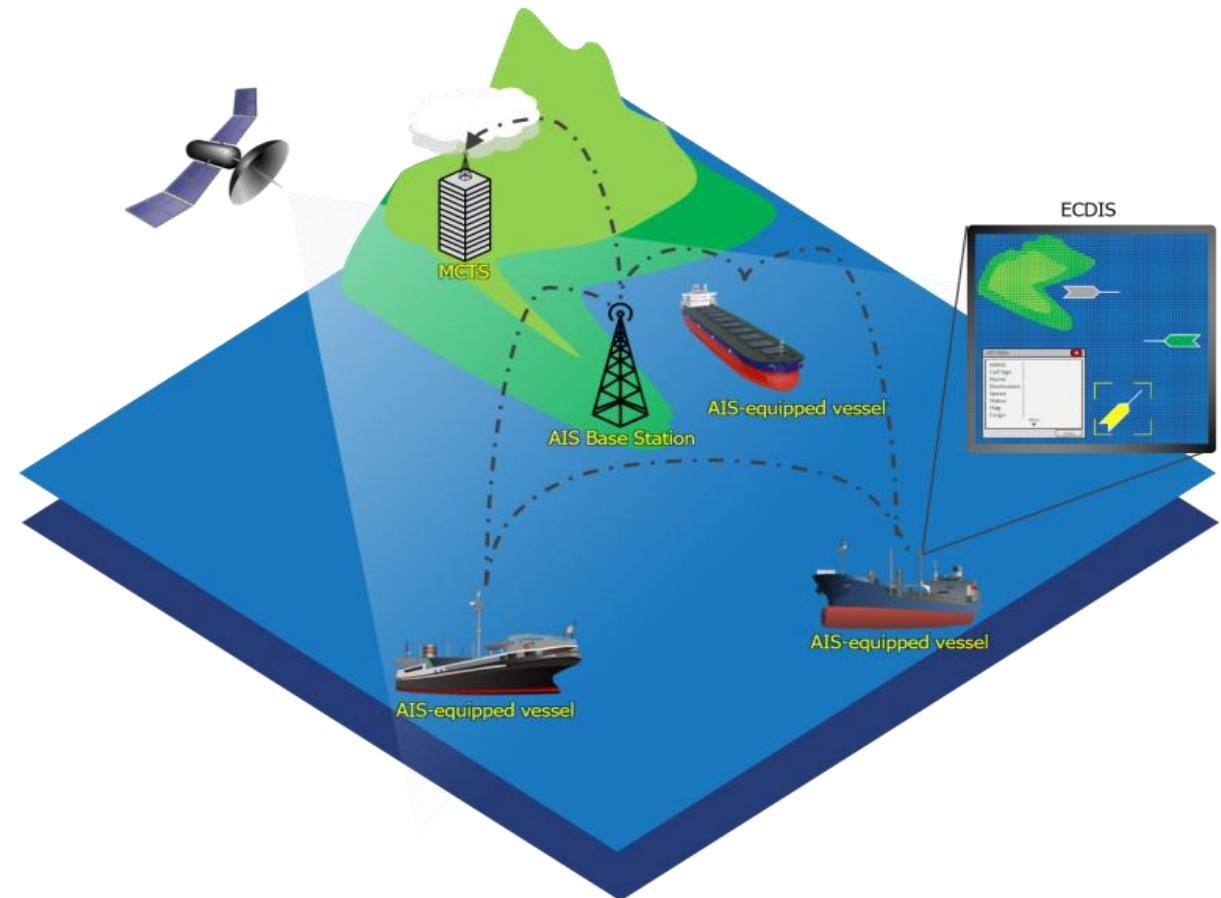


Source: [Automatic Identification System \(AIS\) on the Ships – Maritime Education](#)


Raltron

Monolithic Crystal Filter Solutions for Maritime AIS

Part #	Size(mm)	Frequency (MHz)	Pass Band (kHz)	Insertion Loss (dB)	Guaranteed Attenuation (dB)	Application	Datasheet
RXF-161.975-12-7050-6-4	7.0 x 5.0	161.975	± 6.0	8.5	70	Maritime AIS	 PDF
RXF-162.025-12-7050-6-4	7.0 x 5.0	162.025	± 6.0	8.5	70	Maritime AIS	 PDF

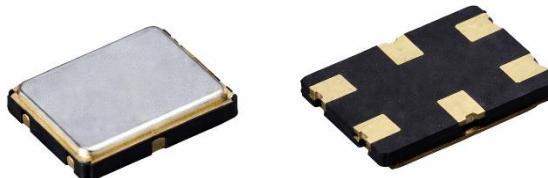


Patient Monitoring - Wireless Telemetry

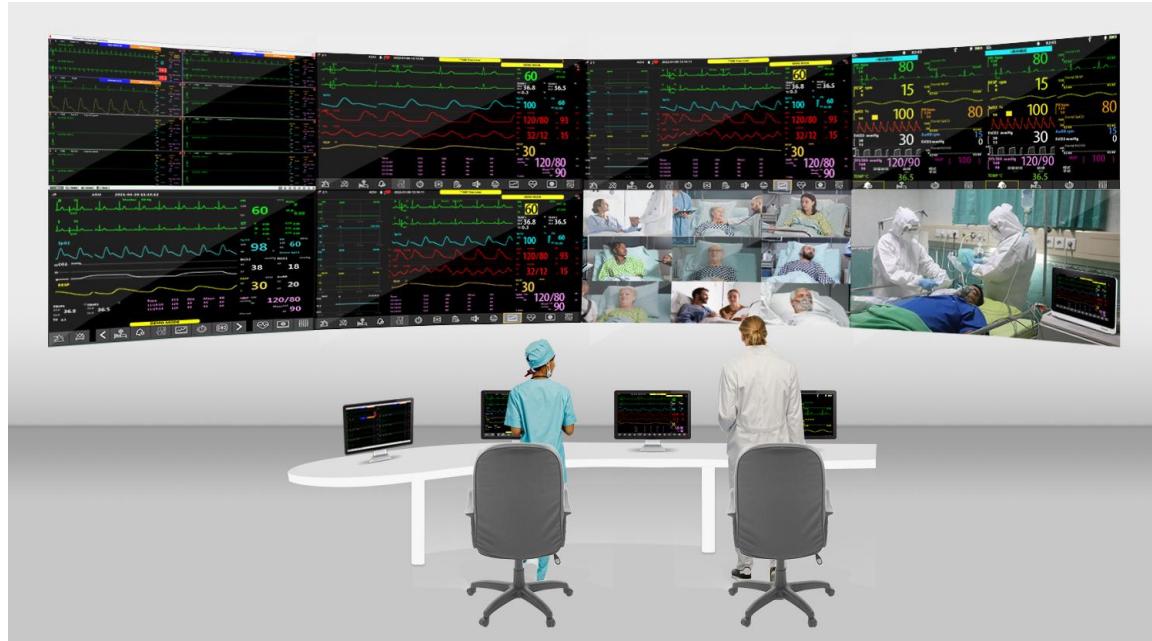

Multiple filters are installed inside the station to match the number of bedside monitors / portable telemetry transmitters.

Source: [Central Monitoring System](#)

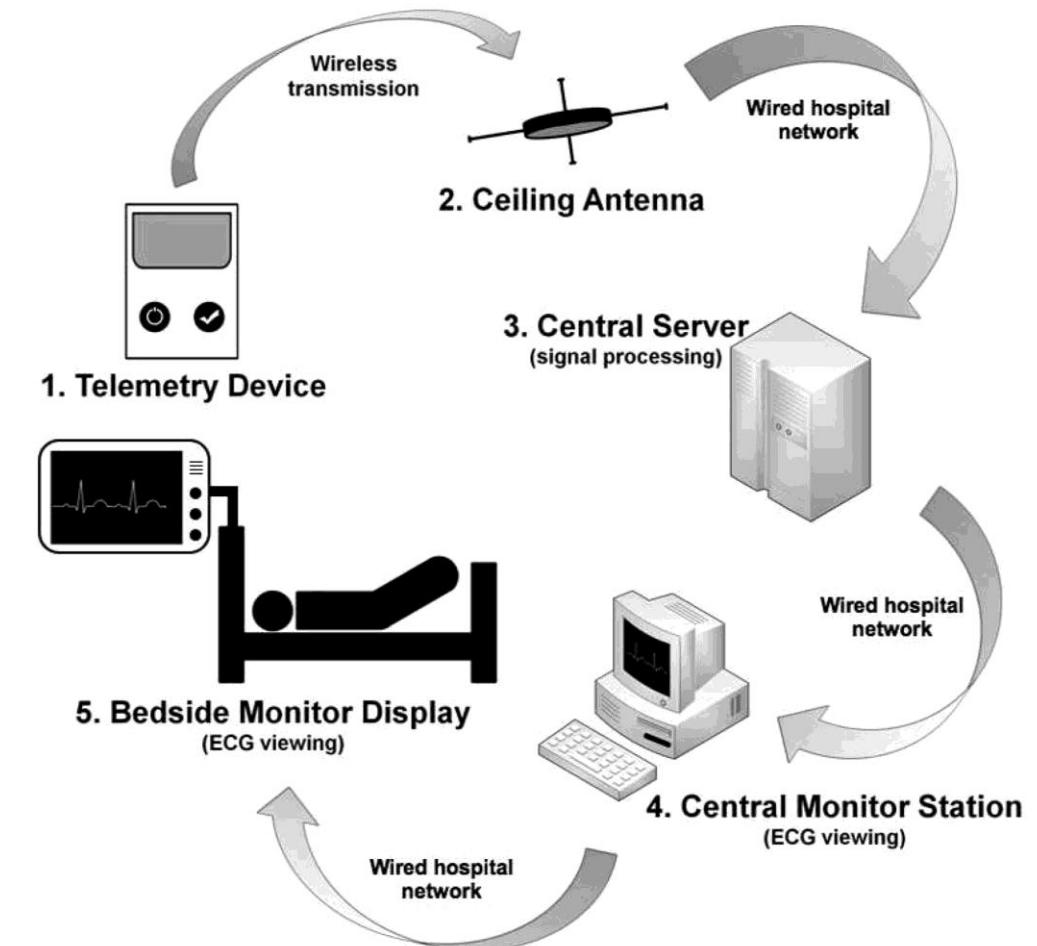


Source: [Latency of ECG Displays of Hospital Telemetry Systems | Circulation](#)

Raltron

Monolithic Crystal Filter Solutions for Patient Monitoring

Part #	Size(mm)	Frequency (MHz)	Pass Band (kHz)	Insertion Loss (dB)	Guaranteed Attenuation (dB)	Application	Datasheet
RXF-135.900-15-7050-6-4	7.0 x 5.0	135.900	± 7.5	7.0	80	Patient Monitoring	

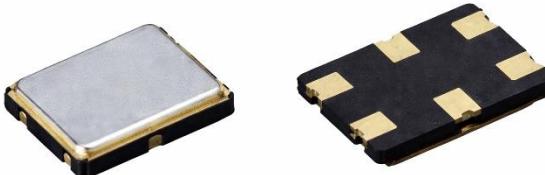

Contact

<http://www.raltron.com>

Raltron Electronics
3075 N.W. 107 Avenue
Miami, FL 33172, U.S.A.
Phone: +1 305 593 6033
Fax: +1 305 594 3973